


Firmware Update Instructions

Step 1: Flexineb E3 Controller → Move the **Red Switch** to RIGHT position for update function




Step 2: Connect a Mini-B USB / Standard USB Cable

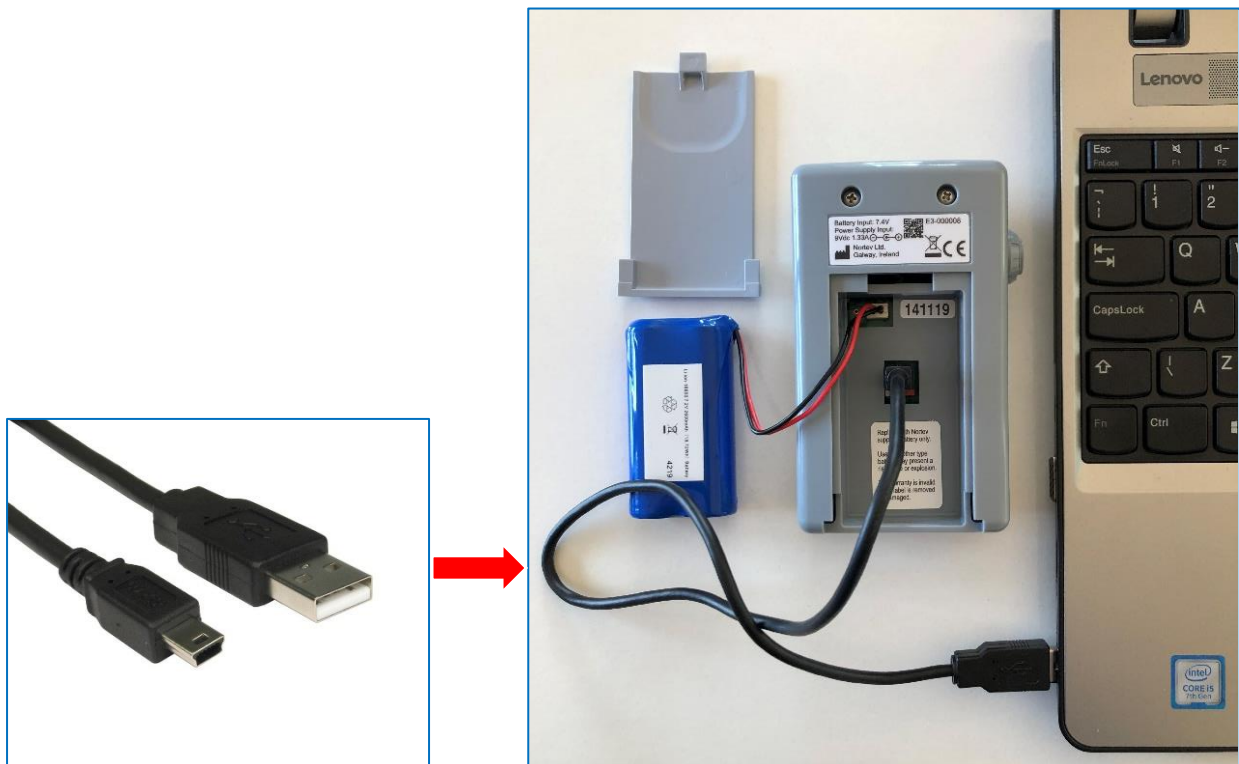


Firmware Update Instructions

Step 3:


Go to www.flexineb.com, **LOG IN** or **CREATE ACCOUNT** & follow the **Click on** signposts in Steps 3 to 10

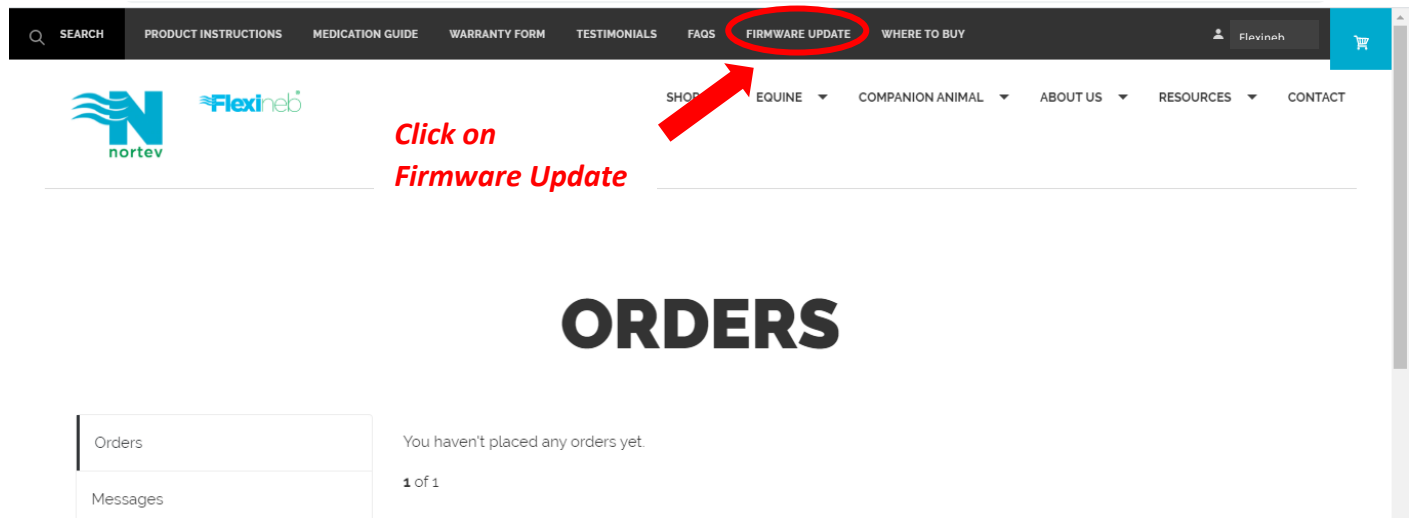

Step 4:

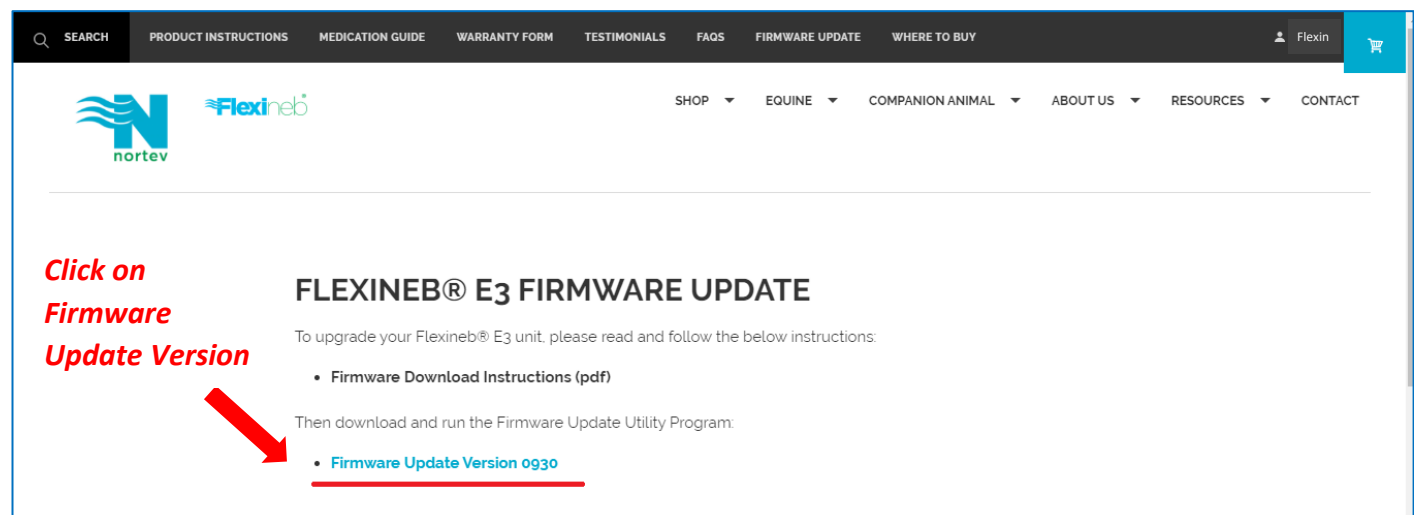


Step 5:

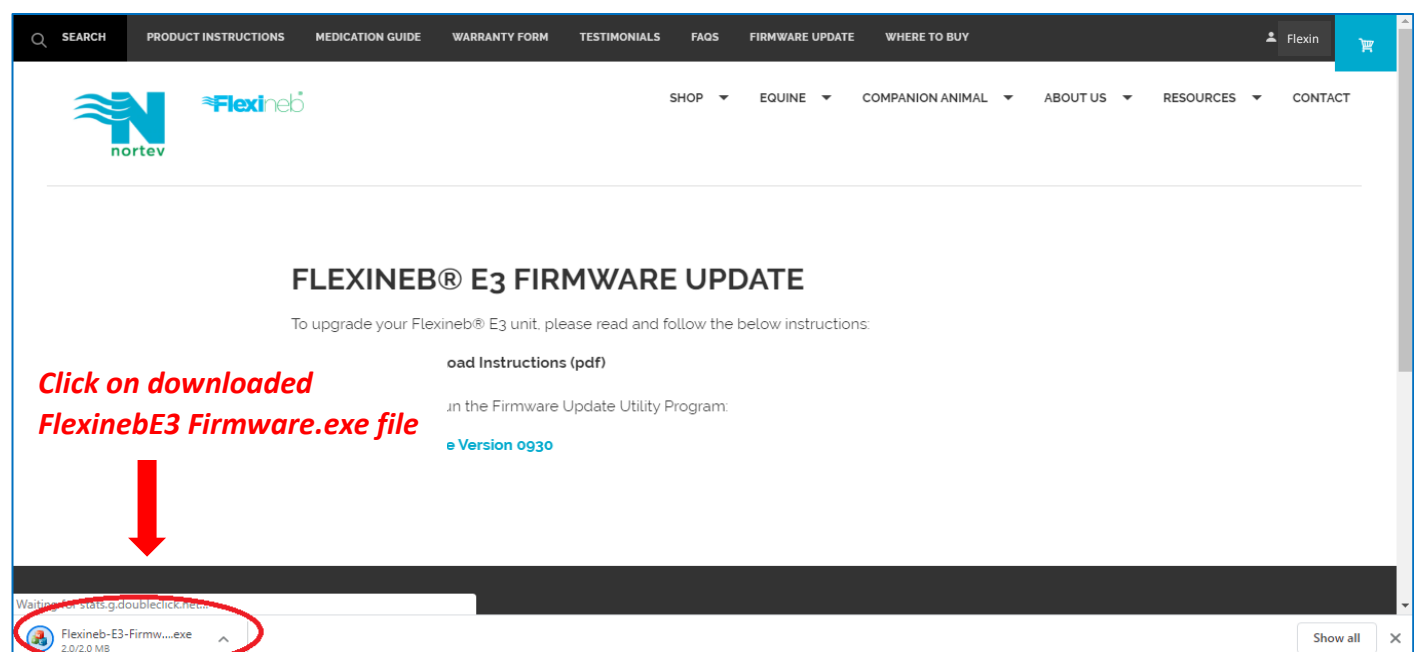


Firmware Update Instructions


Step 6:

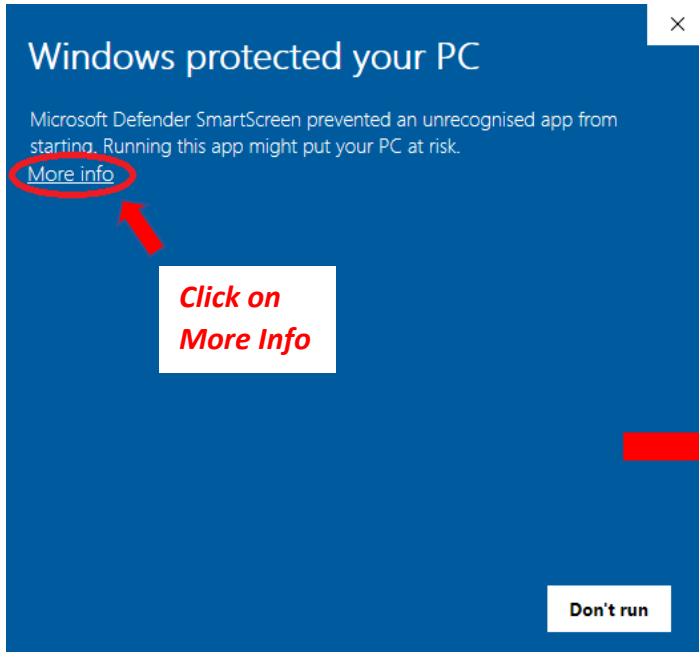


Step 7:

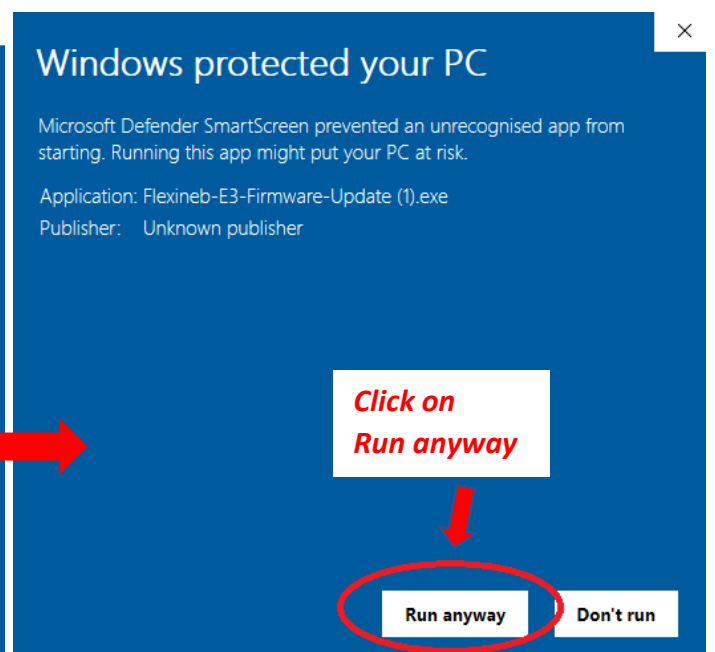

Step 8:

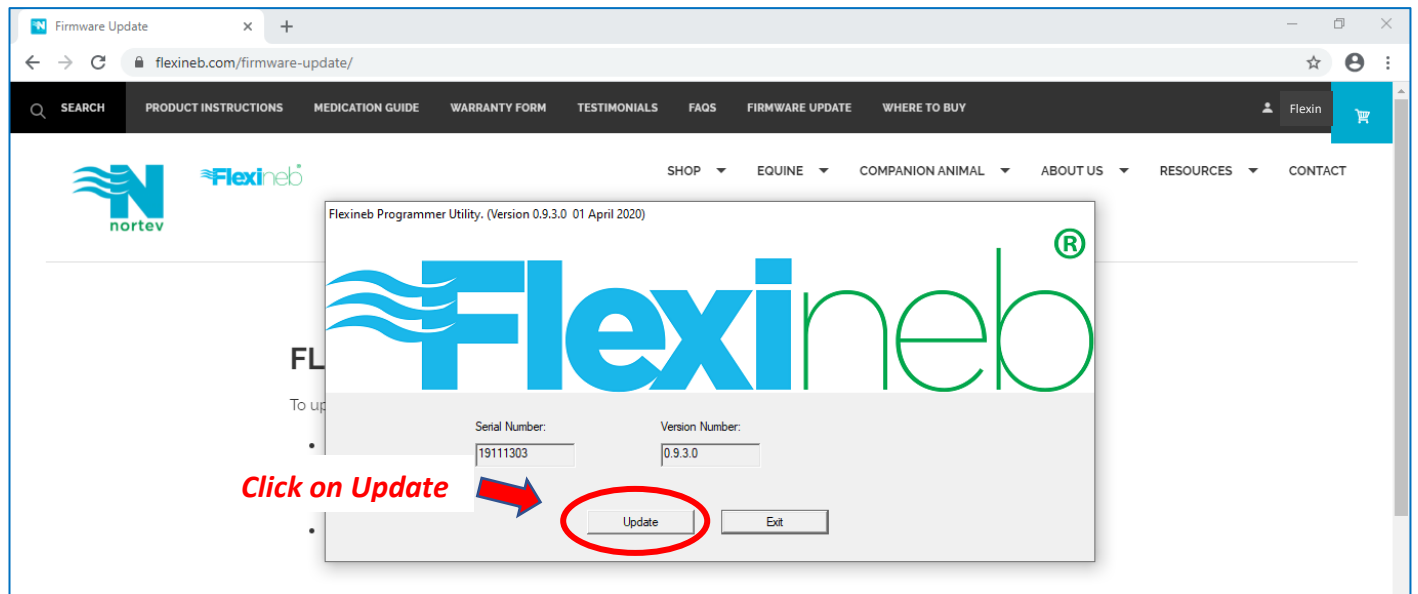

Step 9:

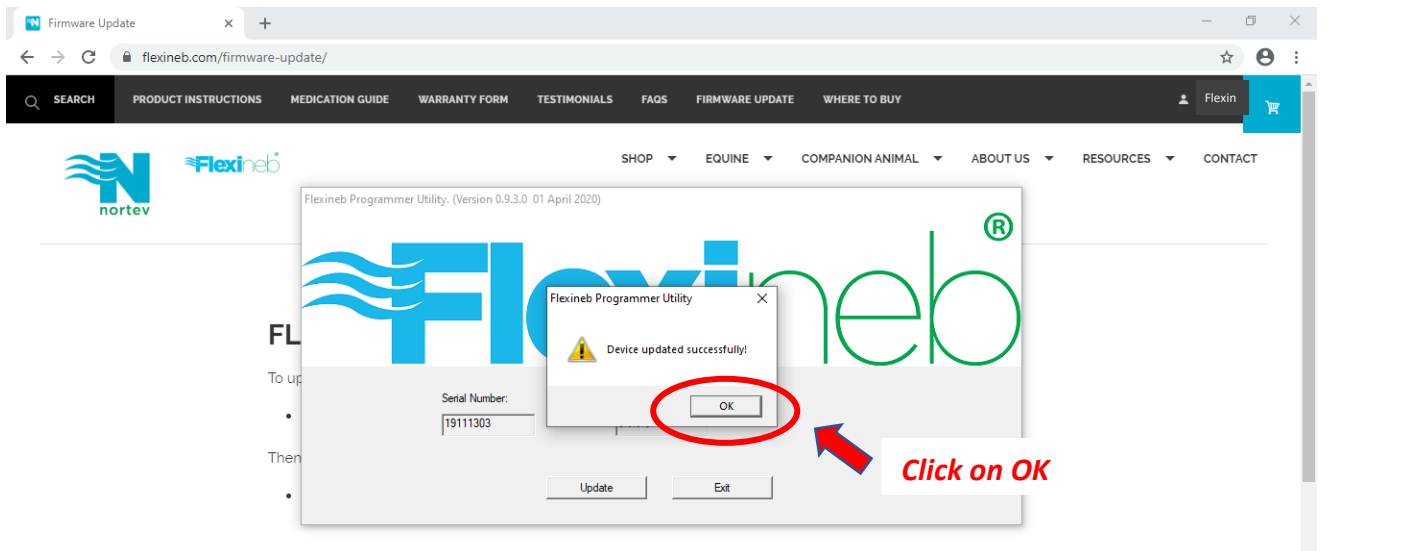

Step 10:



Step 11: Flexineb E3 Controller → Move Red Switch back to LEFT position for normal function



END