


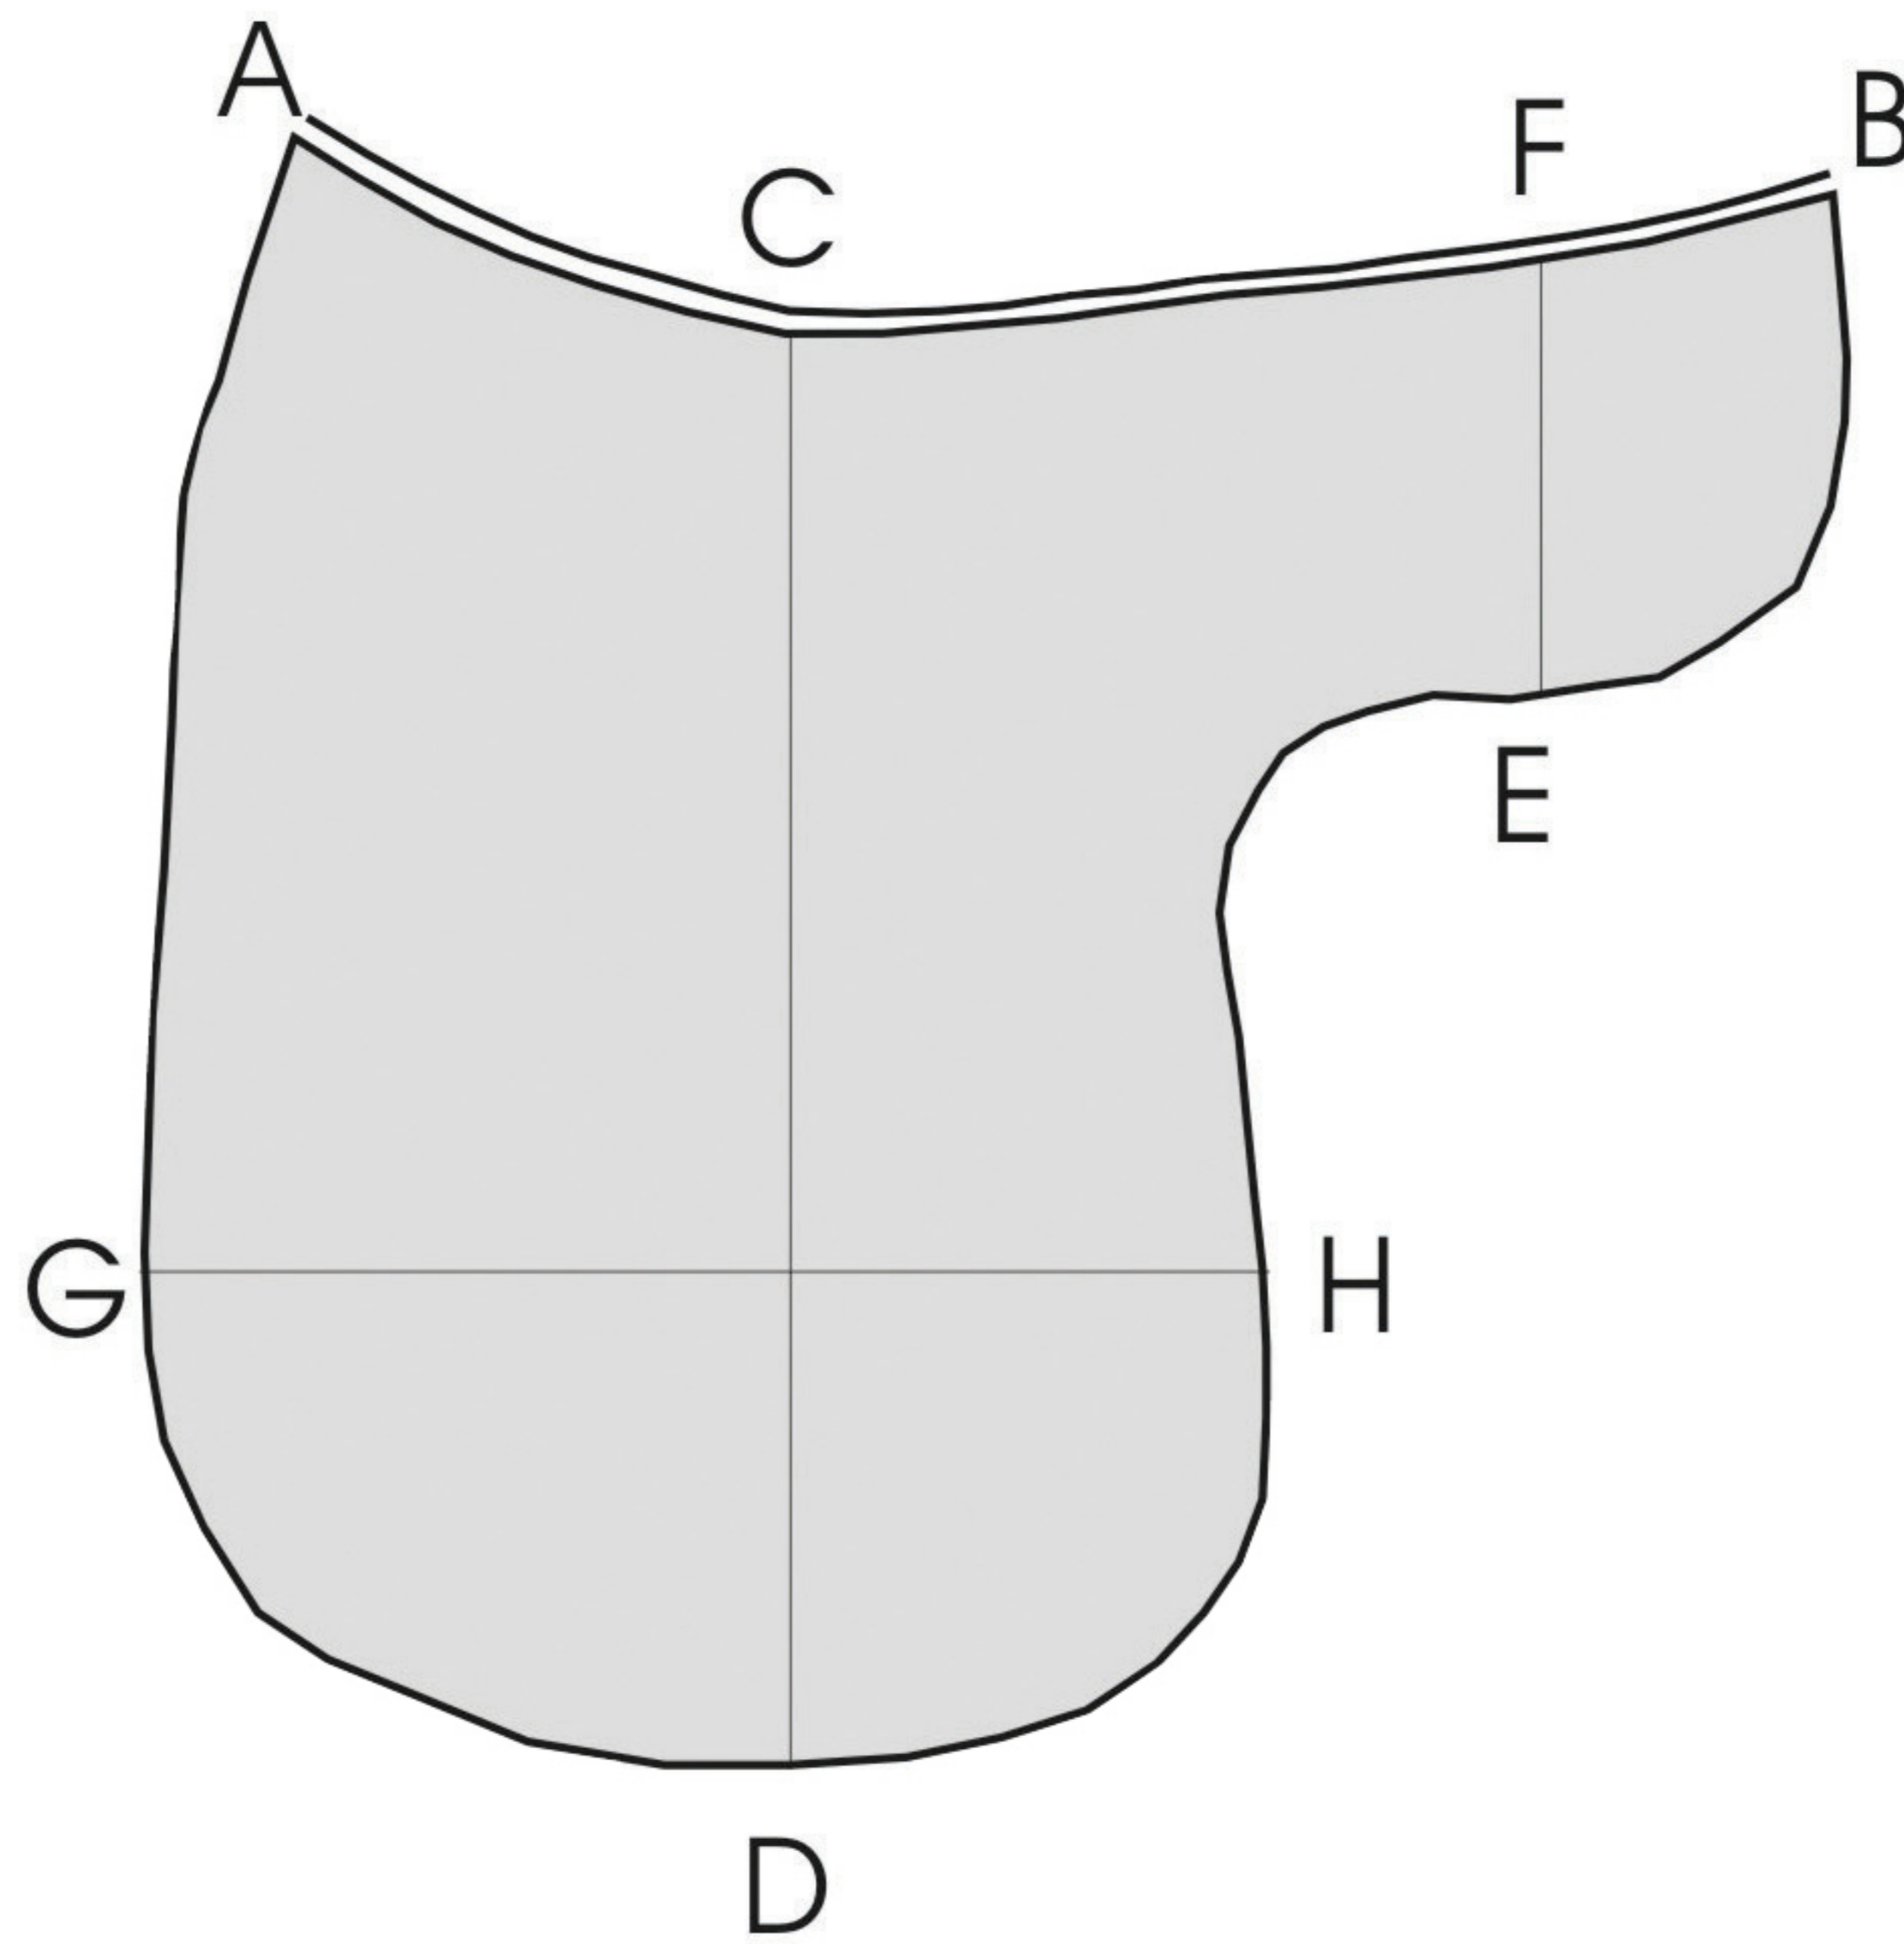

HOW TO SELECT THE CORRECT SIZE PAD:

1. Measure the length of top line along the curvature of the top line. (A to B)
2. Measure the Flap length from the lowest point of the top line to the lowest point vertical. (C to D)
3. Measure the Width of rear cushion from the lowest point of panel to the top line. (E to F)
4. Measure the Flap width (Contoured Pads only) horizontally across the widest part of the flap. (G to H)



Size	*AP SADDLE SIZES	*DR SADDLE SIZES	LENGTH of TOP LINE	FLAP LENGTH A/P	FLAP LENGTH DR	FLAP LENGTH JP	WIDTH OF REAR CUSHION	FLAP WIDTH A/P	FLAP WIDTH DR	FLAP WIDTH JP
S	16.5	16.5	18.5"	18.5"	19.75"	18.5"	7.0"	14"	13.75"	15.5"
M	17-17.5	17	21.25"	19.5"	21"	19"	7.5"	15"	14.5"	16.5"
L	18	17.5-18	23"	20.25"	22"	19.5"	7.5"	16.5	15.25"	18"
XL	18-18.5	18.5	24.5"	20.25"	22"	19.5"	8.5"	16.5"	15.25"	18"